

# ATMT

## User Manual



MP140

- Equalizer:**
1. Select Equalizer mode and short press **[P1]** button to enter info.
  2. Short press **[M+] / [←←]** button to select your desired option (e.g. Normal, Pop, Rock, Classic, Jazz, Bass, Custom EQ)
  3. Short press **[P1]** button to confirm.
- 3D:**
1. Select 3D mode and short press **[P1]** button to enter info.
  2. Short press **[M+] / [←←]** button to select your desired option(e.g. ON, Off)
- Play Rate:**
1. Select Play Rate mode and short press **[P1]** button to enter info.
  2. Short press **[M+] / [←←]** button to select your desired option(e.g. 1.00X, 1.14X, 1.33X, 0.67X, 0.80X)
  3. Short press **[P1]** button to confirm
- Intro:**
1. Select "Intro" mode and short press **[P1]** button to enter info.
  2. Short press **[M+] / [←←]** button to select your desired option from "00" to "15"
  3. Short press **[P1]** button to confirm
- Display:**
1. Select "Display" mode and short press **[P1]** button to enter info.
  2. Short press **[M+] / [←←]** button to select your desired option(e.g. Off, Wave motion, Stereo)
  3. Short press **[P1]** button to confirm

### Accessories

- |                 |           |             |          |                   |
|-----------------|-----------|-------------|----------|-------------------|
| ①               | ②         | ③           | ④        | ⑤                 |
|                 |           |             |          |                   |
| Installation CD | USB Cable | AAA Battery | Earphone | Quick Start Guide |

### Buttons and the functions

- |  |                           |
|--|---------------------------|
| 1. <b>[M]</b> : Menu button  | 2. <b>[←←]</b> : Backward |
| 3. <b>[P1]</b> : Play/Pause/Confirm button                         | 4. <b>[M+]</b> : Forward  |
| 5. <b>[HOLD P]</b> : Lock/Unlock button (write protection) switch. |                           |
| 6. <b>[RV1]</b> : Record Volume                                    |                           |

### Play MP3 Music

- To Start:**
1. Connect earphone to earphone jack.
  2. Switch **[HOLD P]** to unlock position.
  3. Long press **[P1]** button to enter into "MSC" mode.(The default is "MSC" mode)
  4. Short press **[P1]** button to play music.

In the play mode, short press **[M]** to enter into sub menu and short press **[M+] / [←←]** button to select your desired mode (e.g. Repeat, Equalizer, 3D, Play Rate, Intro, Display, A-B, File Browse)

- Short press **[P1]** to confirm.
- To return main-menu:** Long press **[M]** button.
- To Pause play:** Short press **[P1]** button.
- To resume play:** Short press **[P1]** button again.
- To change tracks:** use **[M+] / [←←]** button.
- To enter record mode:** long press **[RV1]** button start to record.
- To turn unit off:** Long press **[P1]** button.
- Repeat:**
1. Select repeat mode and short press **[P1]** button to enter info.
  2. Short press **[M+] / [←←]** button to select your desired option(e.g. No Repeat, All, Random All, Dir Repeat, Dir All Repeat, Dir Random All)
  3. Short press **[P1]** button to confirm.

### Adjust Volume

In MP3 Play, RPL, FM mode, short press **[RV1]** and short press **[M+] / [←←]** button to adjust the volume.

### RPL (Record mode and Play the record mode)

1. Long press **[M]** button to enter into main menu.
2. Short press **[M+] / [←←]** button to select RPL mode.
3. Short press **[P1]** button to confirm.
4. Long press **[RV1]** button start to record.
5. Short press **[P1]** button to pause record.
6. Short press **[M]** button to save the record file.
7. Short press **[P1]** button to play the record.
8. Short press **[M]** button to enter into sub menu( e.g. Repeat, Play Rate, Intro, Display, A-B, File Browse)
9. Short press **[P1]** button to confirm.

**NOTE: Record power supply is no less than 1.2V**

### SYS (system)

1. Long press **[M]** button to enter main menu.
2. Short press **[M+] / [←←]** button to select "SYS" mode.
3. Short press **[P1]** button to enter info.
4. Press **[M+] / [←←]** to choose your desired mode(e.g. USB Mode, Time, Power, Language, Display, Sys Tools)
5. Short press **[P1]** button to confirm.



#### USB Mode:

Short press **[F1]** / **[F4]** button to select USB Mode (Pen Drive or DRM Download)

#### Time:

Short press **[F7]** / **[F4]** button to select Time (Adjust, Alarm and Time Zone)

Adjust Time: Short press **[M]** button to select YY-MM-DD and the time options, and short press **[F7]** / **[F4]** button to adjust the time.

**DRM: (Optional Function and no this icon in System if MP3 has no "DRM" Function.)**

**NOTE:** To make DRM function, the computer OS must be Windows XP system, installed with Media player 10 or upper version, and the connection with internet is available.

1. In USB Mode to select DRM Download mode and short press **[F1]** button to confirm.

2. Plug in the Player to the USB port of the PC.

3. Enter the Media Player mode in the computer automatically to operate synchronous.

**NOTE: After plug in the USB cable, press [M] button to switch between USB mode and MTP (Media Transfer Protocol) mode for DRM function.**

#### Power:

Short press **[F7]** / **[F4]** button to select Auto off: 000 or in playback. When you select "Auto off:000" and press **[F7]** / **[F4]** to select your desired time.

(4) Click "NEXT" to enter into the next picture.

(5) Choose "Finish" to finish setup program. Restart the PC and you can use the MP3 player.

#### 2. Format to the MP3 player

The MP3 player format is "FAT" format. If you will format the MP3 player and click right key to choose format mode to format in the operate system.

#### Notice

- Please unlock the button before use.
- EQ is not obvious when playing WMA format music.
- Can't identify the sixth and above sixth level of directory.
- Do not leave the player in a place subject to moisture with temperature higher than 35°C, or lower than -5°C
- Do not use the earphones while driving an automobile or riding a bicycle. It's not only dangerous but also against the law.
- It may cause an accident if you turn up the volume of the earphones while walking down the street, especially crossing at intersections.
- Do not turn up the volume too high, doctors warn against prolonged exposure to high volume.
- Stop using the device or turn the volume down if you have ringing in your ears.
- Our packages use cardboard, polyethylene, and do not use any unnecessary materials
- As U-disk, the disk will be write-protected if you switch the hold to lock the buttons.
- The user manual only for reference. It is standard by the sample.
- If the file is WMA format that do not support "Play rate" mode.

#### Language:

1. Select language mode and short press **[F1]** button to confirm.
2. Short press **[F7]** / **[F4]** to select your desired option (e.g. English, Chinese(Simp) Chinese (Trad), Czech, Danish, Finnish, French, German, Greek, Hungarian, Italian, Japanese, Korean, Norwegian, Polish, Portuguese, Russian, Spanish, Swedish, Turkish, Ukrainian, Holand, Thai, Arabic)
3. Short press **[F1]** button to confirm.

#### Display:

Short press **[F7]** / **[F4]** button to select Contrast or Backlight. Short press **[F7]** / **[F4]** button to select your desired number.

#### Sys Tools:

1. Short press **[F7]** / **[F4]** button to select your desired option (e.g. Del File, Format, Reset, System Info.)
2. Short press **[F7]** / **[F4]** button to select "Format" mode and short press **[F1]** button to enter info.
3. Short press **[F1]** button to enter into sub menu (e.g. Quick, Complete)
4. Short press **[F7]** / **[F4]** button to select your option and short press **[F7]** / **[F4]** button to select "Yes/NO"
5. Short press **[F1]** button to confirm.

Select "Reset" mode and short press **[F1]** button to confirm. Short press **[F7]** / **[F4]** button to select "Yes/NO"

#### Technical Specification

No.	Name	Description
1	Capacity of Flash Memory	Build-in Flash Memory, up to 2G.
2	USB Interface	USB2.0(High speed)
3	LCD Display	128x64, 2-color (yellow and blue) OLED
4	Power supply	One 1.5V(AA/AA/R03) battery
5	S/N ratio	>85dB
6	Audio Frequency Range	20Hz - 20kHz
7	EQ	Normal, Pop, Rock, Classic, Jazz, Bass, Custom EQ
8	Decoding Format	MP3 (MPEG 1/0/2, 0/2.5, Layer 1/2/3, ID3 display supported) and WMA
9	File System	FAT16, FAT32
10	File number/folder	9999 files (max)
11	Operating temperature	5°C --- 35°C (41°F --- 95°F)
12	Operating Moisture	10% --- 75%

736-MD218058



Select "System Info" mode and short press **[F7]** / **[F4]** button to look "FW,CHIP at FREE"

#### CD disk use specification

1. USB Flash Disk driver for windows98SE (if the user's computer OS is Windows98S please install the driver)
- (1) Put CD disk to the CD driver
- (2) Click the right key to turn on CD driver and to operate "CD disk/driver/MP3/SETUP.EXE" file.



(3) Click "NEXT" to enter into the next picture.